 


Connect a Chromebook to Wifi

Chromebooks can connect to any network with the following settings: Open networks that don't require a password; Secure networks that use WEP, WPA-PSK, WPA-Enterprise, or WPA2-Enterprise settings; Standards: 802.11 a/b/g/n and 802.11ac for AC equipped Chromebooks

How to Setup a Chromebook with WiFi

There are two places where you can make changes to your wireless settings on a Chromebook. The most convenient route is through the status area in the bottom right-hand corner of your Chromebook's shelf. This is where most of the Chromebook WiFi settings will be located.

 
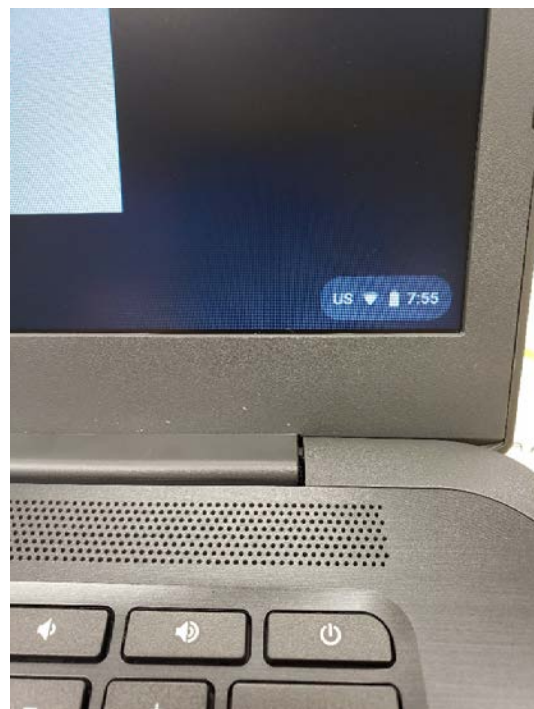 


Your Chromebook can connect to any network with the following settings:

- Open networks that don't require a password
- Secure networks that use WEP, Dynamic WEP, WPA-PSK, WPA-Enterprise, or WPA2-Enterprise settings We recommend WPA2, as it is more secure than WEP or WPA.

How to Connect to Wifi on Chromebook

1. If Needed, On the top right-hand side of the Chromebook desktop, click the **Network** button, and then select the **ENABLE Wi-Fi** option.
2. The **Wi-Fi** button will replace the Network button.
3. Right click the **Wi-Fi** button.
4. A list of available wireless networks will appear. There should be a list of available Wi-Fi networks.
5. Select the network you want to connect to.
6. Enter password if needed and click connect.
7. Your device will connect the wireless network.

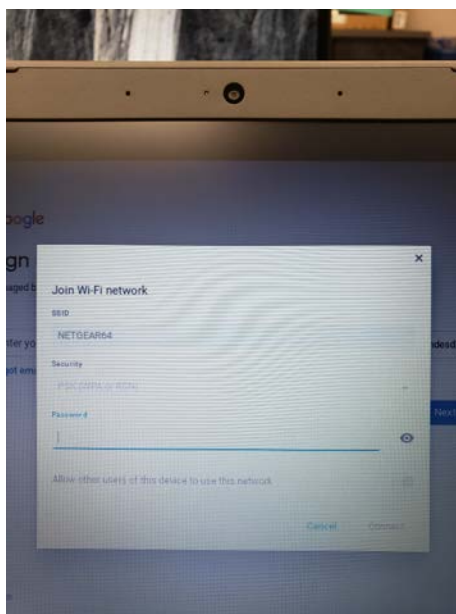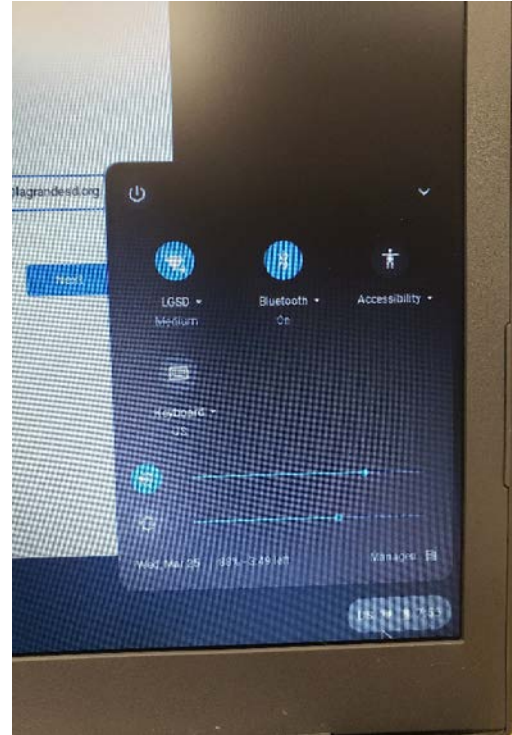

You should be able to login as you do at School.