



Dixon High School – Dell Google Chromebook Visual Guide

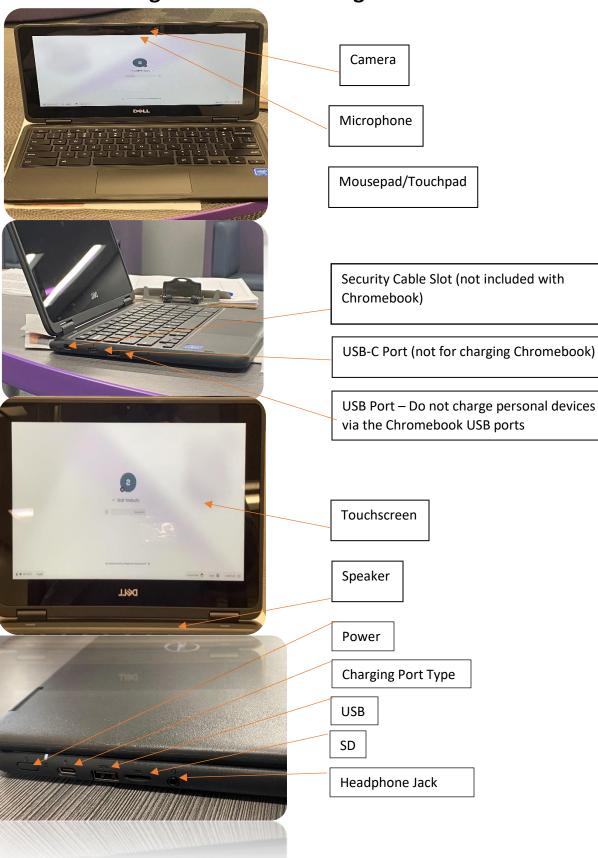

Dixon High School - Google Chromebook's Basic Design

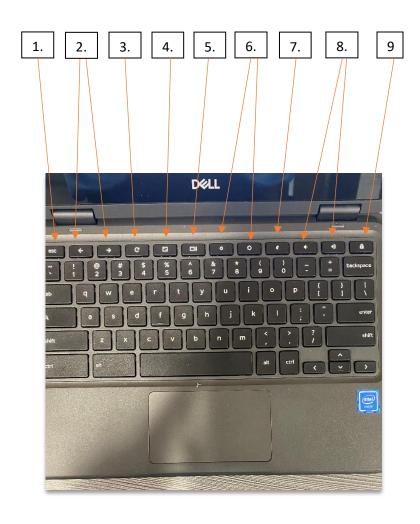

Keyboard Listings:

- 1. <u>Escape Key:</u> This will allow you to target off (deselect) the task you're performing.
- 2. Back Key/Forward Key:
 This will allow you to go to your last webpage or the follow-up webpage you last visited
- 3. Refresh Key: This will allow you to refresh the current page to its original state. EX: All content is not showing up on your screen.
- 4. Restore Up/Down Key:
 This will allow you shrink or enlarge your page size.
- 5. Screenshot Key: This will allow you to take a picture of what is currently shown to you on the screen.
- 6. **Brightness Keys:** This will allow you to adjust the brightness of your screen.
- 7. Mute Volume Key
- **8.** <u>Volume Keys:</u> This will allow you to adjust the volume.
- **9.** <u>Lock Button:</u> Locks the screen

Dixon High School – Google Chromebook's Basic Design



Figure 1.1

Login Page

Bottom-left Side (left to right):

- Shut down button
- App: Click this icon to view all the applications on Chromebook
- Add Person/User: To logon for the 1st time, click and enter your email address and password

Bottom-right Side (left to right):

- Wi-Fi button (triangle-shaped):
 Click this icon to connect to a network.
- Battery charge indicator
- Local Time

Dixon High School – Google Chromebook's Basic Design

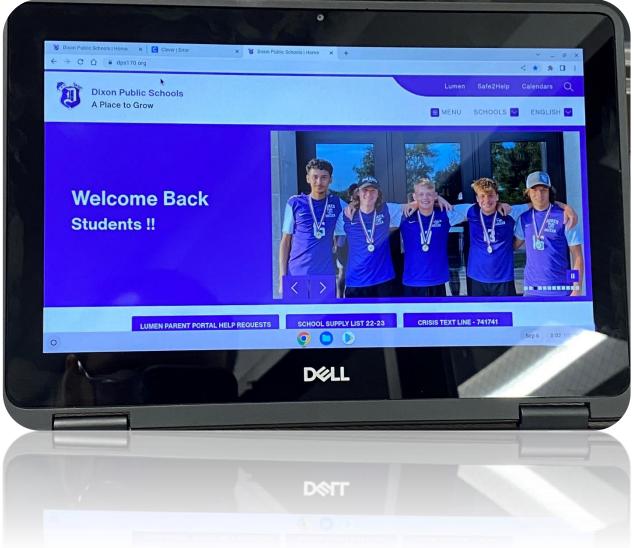


Figure 1.2

Main Page

Bottom-left Side:

- Launcher: Will contain all other applications. EX: Word or Excel
- NOTE Only apps approved by Dixon Schools will be available for installation!

Features:

- Battery is rated for over 4,000 charging cycles
- Battery will last for an entire school day
- Sleek and lightweight
- Virus protection built in
- Automatically updates
- Internet content filter works at school and away from school