
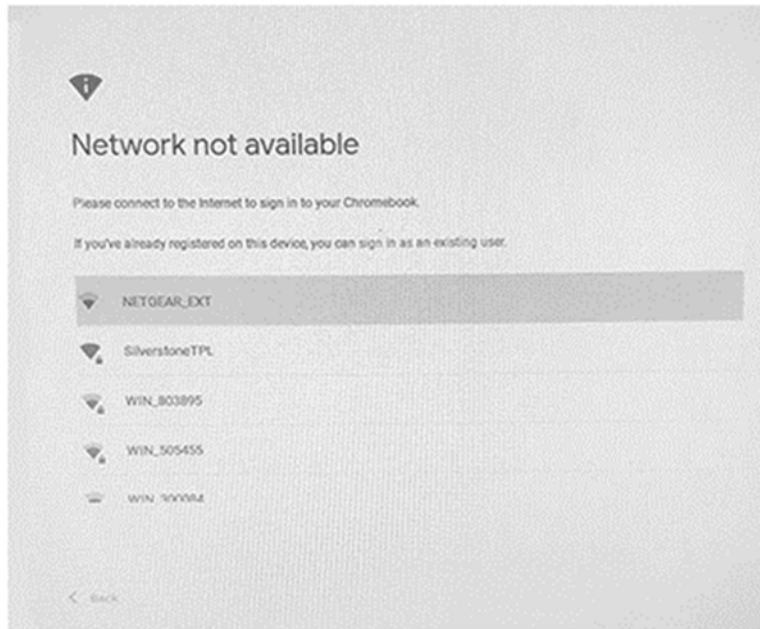


CHROMEBOOK HOME WIFI CONNECT

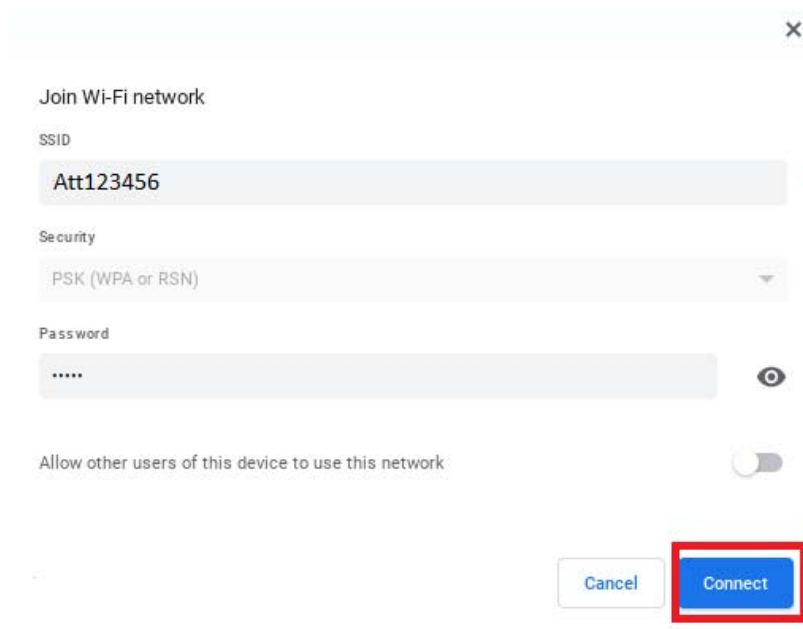
Step 1: Power on your Chromebook, by opening the lid or by pressing once on  the power button, you will be greeted with the page below. From here you can choose your home Wifi from the list



Choose your Home wifi
in the list



Step 2: After selecting your home wifi, please enter the Wifi password, make sure it is entered correctly and click "Connect" below

A screenshot of the "Join Wi-Fi network" dialog box. It has a close button (X) in the top right. The "SSID" field contains "Att123456" and is labeled "Home Wifi Name". The "Security" dropdown is set to "PSK (WPA or RSN)". The "Password" field is empty and masked with dots, with an eye icon to its right. Below the password field is a toggle switch for "Allow other users of this device to use this network". At the bottom, there are "Cancel" and "Connect" buttons. The "Connect" button is highlighted with a red border.

Enter Wifi password



Click Connect

PLEASE GO TO THE EARLIMART WEBSITE UNDER "STUDENTS" FOR A VIDEO DEMONSTRATION